

Conexiones de Instrumentación

Unión


D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/8" x 1/8"	200-6	2-DU
1/4" x 1/8"	400-6-2	4-DU-2
1/4" x 1/4"	400-6	4-DU
3/8" x 1/4"	600-6-4	6-DU-4
3/8" x 3/8"	600-6	6-DU
1/2" x 1/2"	810-6	8-DU
5/8" x 5/8"	1010-6	10-DU
3/4" x 3/4"	1210-6	12-DU
1" x 1"	1610-6	16-DU



E

Unión Pasamuro

D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/4"	400-61	4-DBHU-4
3/8"	600-61	6-DBHU-6
1/2"	810-61	8-DBHU-8
5/8"	1010-61	10-DBHU-10
3/4"	1210-16	12-DBHU-12
1"	1610-16	16-DBHU-16

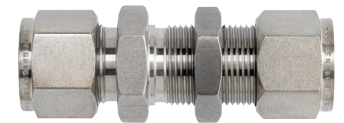


Reductor

D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/4" x 1/8"	400-R-2	4-DRATT-2
3/8" x 1/4"	600-R-4	6-DRATT-4
3/8" x 1/2"	600-R-8	6-DRATT-8
1/2" x 3/4"	810-R-12	8-DRATT-12
3/4" x 1/2"	1210-R-8	12-DRATT-8
3/4" x 1"	1210-R-16	12-DRATT-16



Codo Macho

D.E. del Tubo	Macho NPT	Intercambios	Acero Inoxidable 316 # de Parte
1/4"	1/8"-27	400-2-2	4-DME-2
	1/4"-18	400-2-4	4-DME-4
3/8"	1/4"-18	600-2-4	6-DME-4
	3/8"-18	600-2-6	6-DME-6
1/2"	1/2"-14	810-2-8	8-DME-8
3/4"	1/2"-14	1210-2-8	12-DME-8
	3/4"	1210-2-12	12-DME-12
1"	3/4"	1610-2-12	16-DME-12
	1"	1610-2-16	16-DME-16

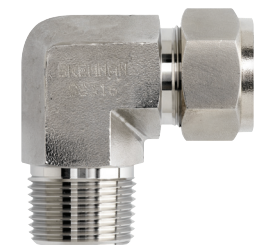

Codo Hembra

D.E. del Tubo	Hembra NPT	Intercambios	Acero Inoxidable 316 # de Parte
1/4"	1/4"-18	400-8-2	4-DFE-2
3/8"	1/4"-18	600-8-4	6-DFE-4
1/2"	1/2"-14	810-8-8	8-DFE-8
3/4"	1/2"	1210-8-8	12-DFE-8
3/4"	3/4"	1210-8-12	12-DFE-12
1"	1"	1610-8-16	16-DFE-16

