

## Conexiones de Instrumentación

### Barril Delantero o Frontal

D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/8"	203-1	DFC-2
1/4"	403-1	DFC-4
3/8"	603-1	DFC-6
1/2"	813-1	DFC-8
5/8"	1013-1	DFC-10
3/4"	1213-1	DFC-12
1"	1613-1	DFC-16



E

### Barril Trasero

D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/8"	204-1	DRC-2
1/4"	404-1	DRC-4
3/8"	604-1	DRC-6
1/2"	814-1	DRC-8
5/8"	1014-1	DRC-10
3/4"	1214-1	DRC-12
1"	1614-1	DRC-16




### Tuerca

D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/4"	402-1	DN-4
3/8"	602-1	DN-6
1/2"	812-1	DN-8
5/8"	1012-1	DN-10
3/4"	1212-1	DN-12
1"	1612-1	DN-16



### Tapa

D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/4"	400-C	4-DCAP
3/8"	600-C	6-DCAP
1/2"	810-C	8-DCAP
5/8"	1010-C	10-DCAP
3/4"	1210-C	12-DCAP
1"	1610-C	16-DCAP

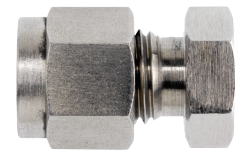

### Tapón

D.E. del Tubo	Intercambios	Acero Inoxidable 316 # de Parte
1/4"	400-P	4-DFPLUG
3/8"	600-P	6-DFPLUG
1/2"	810-P	8-DFPLUG
5/8"	1010-P	10-DFPLUG
3/4"	1210-P	12-DFPLUG
1"	1610-P	16-DFPLUG

